


# 400-4000 Finless Installation Instructions

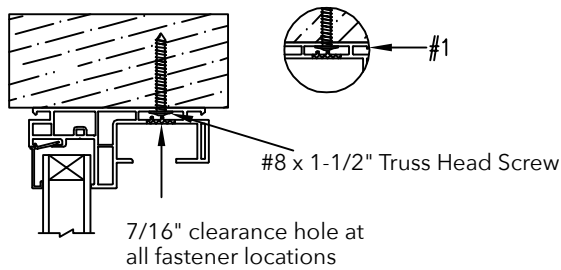

## Finless 4000 Installation Instructions:

- Remove nailing fins. Make sure that the sill is level and that the jambs are plumb.
- Fasten head to 2 by frame with #8 x 1-1/2" truss head screws 2" from each corner and midpoint with 12" (max) between fasteners.
- Remove sash and balances.
- Fasten jambs to 2 by frame with #8 x 1-1/2" truss head screw 2" from each corner with 12" (max) between fasteners. No screws through sill.
- Use 7/16" clearance hold through first vinyl wall at center line of sash cavity. See detail #1

