



# ADA Lock Install


- 1** Mark each side of lock to locate keeper location.



- 2** Remove bottom sash from window.



- 3** Install keepers in marked locations with #6X3/4" self tapping screws.

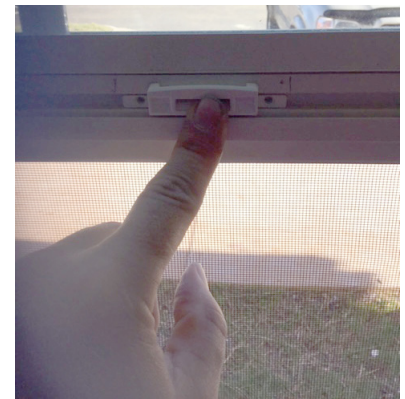

- 4** Remove lock(s) from bottom sash



**5** Notch interlock of bottom sash as shown in pics below.



**6** Reinstall bottom sash and test to make sure it works with the keepers installed.



**7** Install ADA locks to align with keepers using same size screws used to install keepers.



**8** Install pull tabs in ADA locks and test for proper fit and function



**9** If lock on top sash hits bulb seal on the bottom sash it may need to be removed to keep the window from springing up due to compression of the lock and bulb seal when closing. May also have to slightly shave the keeper if it binds while engaging it into the lock.



**BORAL**  
WINDOWS

For information about measuring & installing Magnolia Collection windows, visit our website: [www.boralwindows.com](http://www.boralwindows.com)  
1000 Pyratich Drive • Baldwin, GA • PH: 706.778.1200 • FX: 706.776.6226